
## **NU-WAY STOVE**

## INSTRUCTIONS FOR USE – MODEL 965 WOOD STOVE

Hot while in operation. **DO NOT TOUCH**. Keep furnishings and combustible materials away from stove. For use with wood only. **DO NOT OVERFIRE**. If heater glows, you are over firing. Feed door should remain closed and latched during use.

- 1) Vent stove to the outside using 3 inch stovepipe to form a chimney. To prevent downdrafts, it is recommended that the stovepipe extends 2 feet above the highest point of the shelter. We also recommend that that a 3 inch damper be installed in the 1<sup>st</sup> section of stovepipe nearest to the stove.
- 2) Stove must have fresh air supply into the enclosure when stove is in use. A 6" hole is recommended.
- 3) A clearance of at least 9 inches between stove or flue pipe and any combustible material must be maintained.
- 4) After fire is ignited, ashes should be cleaned periodically from ash pan. Do not allow ashes to build up to the grating, as this will prevent adequate draft to the fire and will cause the grating to melt or deform.

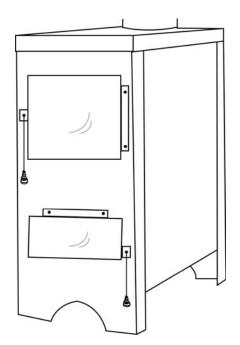

## **WARNING:**

Manufacturer recommends a one hour pre-burn of this stove prior to occupying enclosure.

## **ACCESSORIES AVAILABLE:**

**ASH PAN** 

**PIPE KIT**: Three 24" pipes, one flashing, one damper, one storm collar and one vent cap.

Should you require replacement parts, accessories, or additional information for your stove, please contact Nu-Way Stove Inc.:

For a *complete listing* of all of our products, please visit:

www.nuwaystove.com

Nu-Way Stove Inc. P.O. Box 379 Onaway, MI 49765-0379 **800-544-9611 989-733-8792** 

VISA, MasterCard, Discover, money orders and personal checks are accepted. Call 24 hours.

WARNING: Do not leave stove unattended or in operation while sleeping. Keep this stove out of the reach of children.

\*\*\*180 DAY WARRANTY\*\*\*

If you discover any defects due to faulty workmanship or parts, your stove will be repaired or replaced. Please refer to contact information above.